

How to Use FTP

一. Setting up FTP



Server:

Port:

User:

Password:

FullStrategy: Enable

Path:

Enter the camera FTP Settings page, and fill in the following Settings:

Server: please fill in the camera IP address or domain name.

Port: fill in the Port on the FTP server, generally the default for the 21st.

User: please fill in the FTP User


Password: please fill in the FTP Password

FullStrategy: automatic override function, check the enabled, when insufficient storage space in the FTP server, the earliest date of video and image files will be deleted.

Path: choose to upload the video and image file storage paths, default is stored in the ipc folder

Note: when setting completed, click the Test button to Test the FTP set is working, if prompt Test fails, please do check the following:

1. Check whether the configuration is correct, the FTP server address is work, account password is correct, and so on...
2. When the FTP server via the Internet connection, check the camera gateway and DNS Settings, and to determine the camera can connect to the Internet, you can test the camera the camera network Settings page if you can connect to the Internet (pictured).




Network Test:

Wan Test:

二. Motion detecting upload video and images to the FTP server

Area:

Activate: Enable

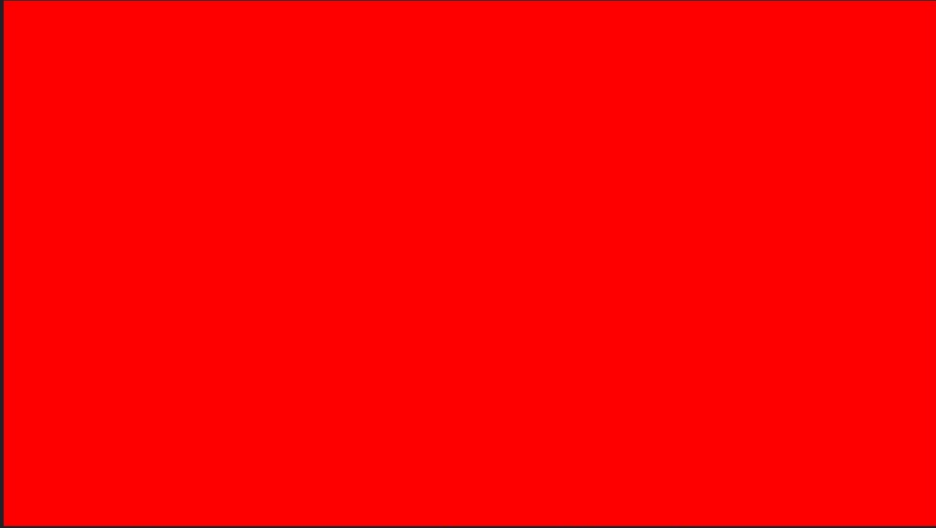

Sensibility:

Enter the camera motion detecting Settings page, enable the camera motion detecting function.

Action:

E-Mail: Send E-mail

Output: Alarm With Snapshot Send To Email Upload to FTP

Alarm With Record Upload to FTP

Trigger Alarm Output

Schedule: Week Mode Work Mode Always

Motion detecting to Upload pictures to the FTP server: first select the alarm with the snapshot ", and then select "Upload to FTP"

Motion detecting Upload the video to the FTP server: first select the "alarm with Record", and then select "Upload to FTP"

Note: only use the TF extension card camera support to upload the video to the FTP this function!

三. Timing captured and uploaded to the FTP server

Snapshot:

Status: Enable

Interval: Minutes

Action:

E-Mail: Send [Email Setting](#)

FTP: Send

Enter the camera capture Settings page, enabling capture function and set the time interval, and then Select the FTP.



www.ipccam.com www.ipcloudcamera.com support@ipccam.com

IPCC Technology CO.,Ltd.

Address: Building E, Dahong Science&Technology Park,
1st Industrial Area, Baihua Road, Guangming District, Shenzhen, P.R. China

Tel: 86-755-23416862 -666(Ext.)

Fax: 86-755-23416862

Mobile phone:86-13480787575

Email: support@ipccam.com

Skype: [ipccam](https://www.skype.com/people/ipccam)

Website: www.ipccam.com